


### Removal

---

- 1 Remove spare wheel and plastic cover rail for vent lines (2).
- 2 Pull vent lines (2) out of connecting hoses (4).
- 3 Remove fuel expansion tank (1) complete with positive and negative vent line.

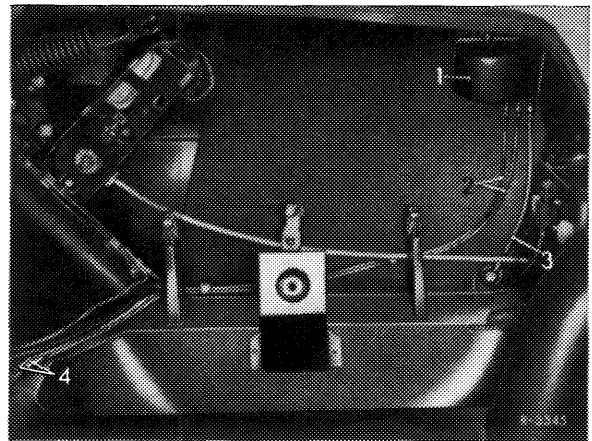

- |                                    |                                    |
|------------------------------------|------------------------------------|
| 1 Fuel expansion tank              | 3 Negative vent line to atmosphere |
| 2 Positive vent lines to fuel tank | 4 Connecting hoses                 |

### Installation

---

- 4 For installation proceed vice versa.

#### Attencion!

Avoid sharp bends in positive and negative vent lines during installation.